


TABLE BASE INSTALLATION INSTRUCTIONS

Hardware included:

1. Column threaded rod
2. Top outside nut
3. Inside nut and lock washer
4. Bottom nut and lock washer
5. Base bottom
6. Table spyder

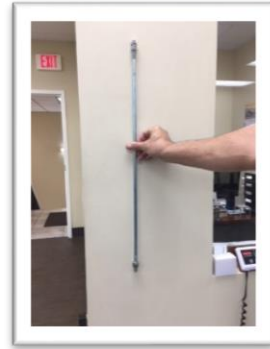

Top of spyder demonstrating rod and nut flush with spyder:



Inside tightening nut and locker washer correctly installed:










 
Column alignment with bottom, column should easily click in place:



Column notch alignment with table spyder:



Model:AB0463A34ALU

A		3PCS
B		1PC
C		1PC
D		2PC
E		1PC
F		1PC
G		2PC
H		1PC

